

### Visiting Linköpings flygklubb, at Saab airport (ESSL)

#### **General information**

- PPR at all times. Apply via <a href="https://ppr.lfk.se/">https://ppr.lfk.se/</a>
- For charts, local traffic regulations and noise abatement procedures, see AIP Sweden on <a href="https://aro.lfv.se/">https://aro.lfv.se/</a>
- SAAB (south of the runway) is a protected area.
  Photography depicting SAAB is prohibited.
- Saab TWR frequency is 118.805. Station name "Saab RADIO" is used when TWR is closed.
- TWR hours of service are published in NOTAM.
  TWR may be open outside published hours.

#### Arrival when TWR is closed

- Blind transmit your intentions.
- Enter Saab CTR via its entry/exit points.
- Fly and turn north of the RWY, aim for the TWR and join traffic pattern at 1000 MSL. See illustration on page 2.
- Taxi to General Aviation Center (GAC) via TWY Lima.
- Park at GAC. See page 3 for GAC layout.

### **Departure when TWR is closed**

- TWR is closed when the RGL lights (on TWY Lima) are turned off.
- Contact Saab airport services on +46 (0)13 18 15 00, to confirm there is no activity on or near the runway area.
- Perform run-up on the run-up area. See page 3 for GAC layout.
- Blind transmit before entering TWY Lima.
- For departure procedures, see illustrations on page 4 and 5.
- Exit Saab CTR via its entry/exit points.
- Contact Östgöta APP on 135.850 before climbing to 1600 MSL.

#### **Additional details**

- When TWR is open upon departure, contact TWR after start-up.
- On the ground, Östgöta APP is available on 133.105.
  Include the frequency on the initial call.
- Avoid Malmen CTR and Saab CTR sector B, west Linköping C, unless Malmen TWR is confirmed closed.
- Runway is unlit when Saab TWR is closed.
  Night flight is not possible outside TWR hours of service.










# **General Aviation Center (GAC) layout**

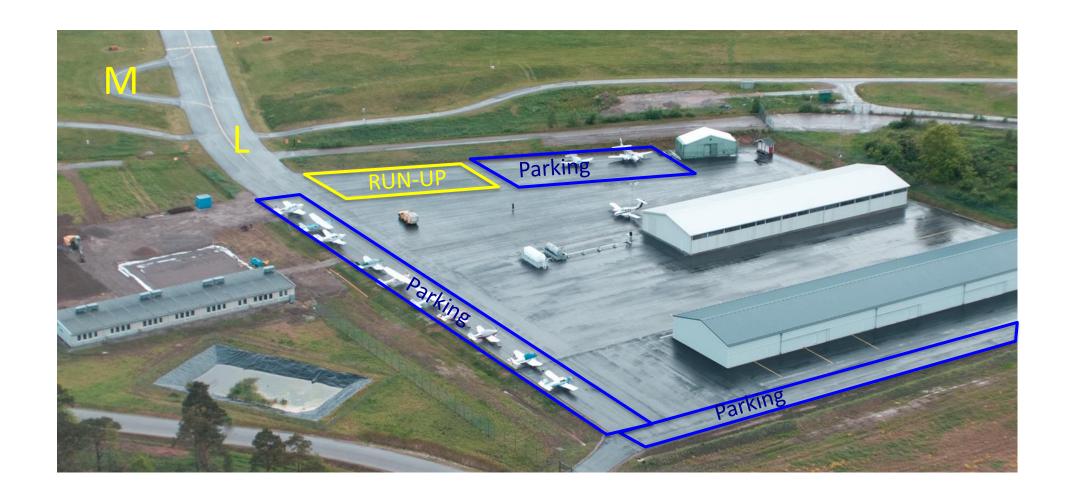



# Departure procedure RWY 11, when TWR is closed





# Departure procedure RWY 29, when TWR is closed

